



MANUALE UTENTE



SOFTWARE CONF-CH PER STRUMENTI SERIE CH100



Maggio 15 Rev. 03

Il KIT è composto da:

- 1 convertitore USB / RS-485 (lunghezza cavo 1,8 m) + connettore per CH100
- 1 foglio d' istruzioni

ISTRUZIONI

Scaricare il driver per il convertitore e il software Conf-CH dal sito www.italcoppie.it / Prodotti per tipologia / Strumentazione industriale / Termoregolatori / Opzioni / SOFT004 / Download driver e Download software di configurazione.

! PRIMA DI CONNETTERE IL CONVERTITORE ALLA PORTA USB DEL PC INSTALLARE IL DRIVER DI COMUNICAZIONE

Dopo aver installato il driver di comunicazione, seguire le procedure sotto riportate:

- Connettere il convertitore ad una porta USB del PC ed attendere che l'installazione del driver sia completata.
- Installare il software Conf-CH.
- Dal pannello di controllo di windows nel menù "gestione periferiche", verificare il numero della COM che il sistema operativo ha assegnato al convertitore USB.
- Lanciare il software Conf-CH e dal menù Configurazione / Interfaccia, selezionare la COM del convertitore.


Nota:

Il software può essere installato sui seguenti S.O.:
XP / Windows 7 (32 / 64 bit)

Requisiti minimi di sistema:

- 256 Mb di RAM
- Processore Pentium (o equivalente)
- Risoluzione video 800x600 (consigliata 1024 x 786 pixel)

COLLEGAMENTO TRA PC E CH100

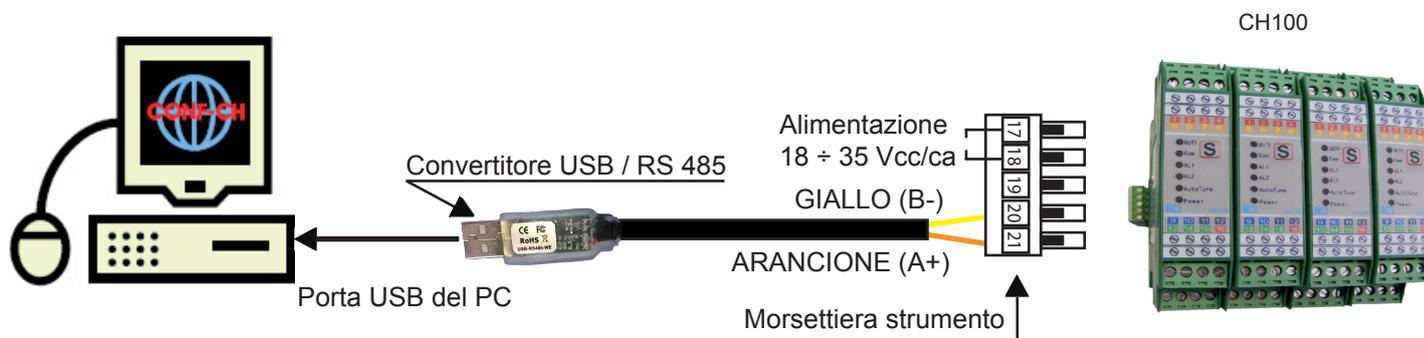



USER'S MANUAL



CONF-CH SOFTWARE FOR CH100 SERIES INSTRUMENTS



May15 Rev. 03

The KIT include:

- 1 USB / RS-485 converter (cable length 1.8 m) + CH100 connector
- 1 User's manual

INSTRUCTIONS

Download the driver for USB converter and the Conf-CH software from www.italcoppie.it / Products by types / Process instruments / P.I.D controllers / Options / SOFT004 / Download driver and Download configuration software.



BEFORE TO CONNECT THE CONVERTER TO THE USB PORT OF PC, INSTALL THE COMMUNICATION DRIVER

After the installation of the communication driver follow the below procedure:

- Connect the converter to USB port of PC and wait up to the end of installation.
- Install the Conf-CH software.
- From windows control panel, in "device manager" menù, check the COM number assigned from the operating system to USB converter.
- Launch the Conf-CH software and from Configuration / Interface menù, select the COM of converter.

Note:

The software is compatible with:
XP / Windows 7 (32 / 64 bit)

Minimum system requirements:

- 256 Mb of RAM
- CPU Pentium (or equivalent)
- Video resolution 800x600 (recommended 1024x786 pixel)

CONNECTION BETWEEN PC AND CH100

